


Instruction Sheet for kit #47027005

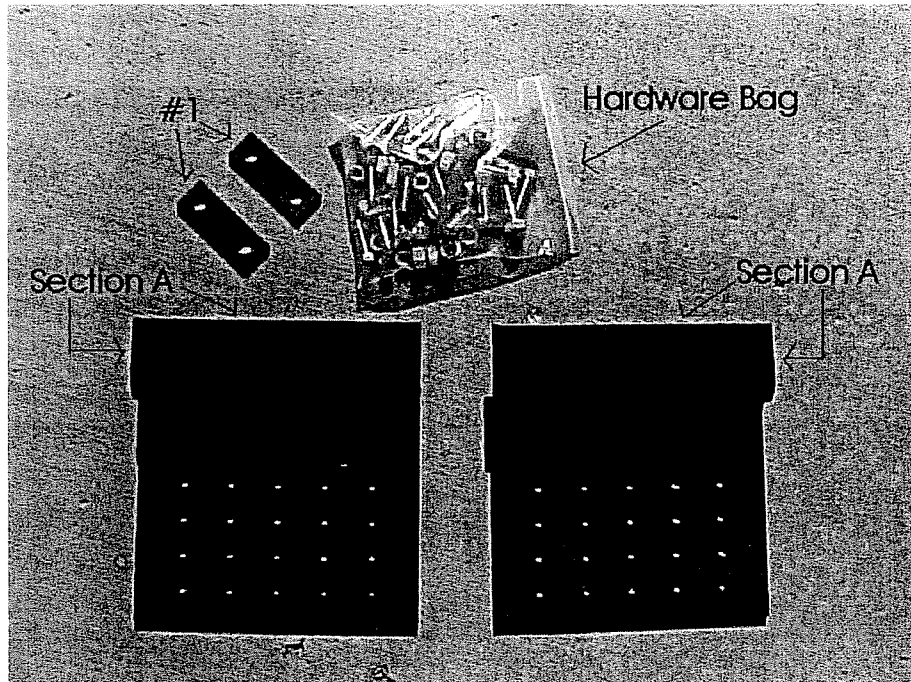

To install follow mounting instructions below:

Note: Do not remove any welded or riveted fast cross members.

1. Place bracket (section A) on the outside of frame to determine where to drill four (4) holes (each side/right and left) to mount attachment brackets to frame. (use reinforcement bracket (#1) as a guide for hole location in brackets.)
2. Drill brackets (section A) and frame.
3. Place the 5/8" bolts through the bracket and frame. Put reinforcement bracket (#1) on the inside of frame and put bolts through bracket, frame, and reinforcement brackets and put nut on bolts. (Tighten slightly, leave loose until the hitch frame is bolted to the brackets (using 1/2"-13 X 1 3/4" bolts) (10 bolts and 10 nuts).

Note: There are multiple heights available on the brackets (section A), so before installing, measure from ground up to determine the desired holes to mount the hitch frame).

4. Torque all bolts to the specification below:
1/2" dia. grade 585 foot lbs.
5/8" dia. grade 5125 foot lbs.
5. When complete check for proper clearances between truck components and hitch frame.
6. Slide red handle covers over both handles and ENJOY YOUR NEW HITCH!

